

NOTE/IMPORTANT:

Sony Cameras from 2011+ will require the HYPEYE for 2011 models.

CX130, CX160, CX190, CX200, CX210, ... If the camera was made in 2011 or 2012 you will need this version of the HYPEYE!

If you do not use this version you may not be able to focus through a wide angle lens!!! This is because Sony has changed their protocol and no longer allows us to control the mode of the camera. Therefore all advance features are no longer available. The hypeye will be able to turn your camera on and off, and start and stop recording. It will also be able to take stills continuously with the photo kit or expansion kit.

Be warned: A lot of these cameras need the **"turn on by lcd"** feature turned off to allow the controller to work properly. If your camera does not have this option you may need the lcd to be flipped open or the view finder to be pulled out!

Also note, only the CX190, 200 and 210 do not have optical stabilization. However they do not have an adapter ring for a wide angle lens. Use other cameras at your own risk!

Current compatibility list:

2012 Camcorders (All Require [HYPEYE 2011+](#))

HDR-CX190/

HDR-CX190

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX200

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX210/

HDR-CX210E

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX250E

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX260

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX580

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX730E

Requires [HYPEYE 2011+](#) [\(See note\)](#)

HDR-CX760

Requires [HYPEYE 2011+](#) [\(See note\)](#)

2011 Camcorders

(All Require
HDR-CX130

[HYPEYE 2011+](#)

Requires

[HYPEYE 2011+](#)

[\(See note\)](#)

HDR-CX160

Requires

[HYPEYE 2011+](#)

[\(See note\)](#)

HDR-CX360V

Requires

[HYPEYE 2011+](#)

[\(See note\)](#)

HDR-CX560V

Requires

[HYPEYE 2011+](#)

[\(See note\)](#)

HDR-CX700V

Requires

[HYPEYE 2011+](#)

[\(See note\)](#)

Americas

High Definition on Hard Disk Drive (AVCHD)

HDR-SR1

HDR-SR5

HDR-SR5C

HDR-SR7

HDR-SR8

HDR-SR10

HDR-SR10D

HDR-SR11

HDR-SR12

High Definition on Memory Stick (AVCHD)

HDR-CX7

HDR-CX12

HDR-TG1*

HDR-TG5*

HDR-CX100 HYPEYE D MINI not recommended+

HDR-CX110 HYPEYE D MINI not recommended+

HDR-CX150 HYPEYE D MINI not recommended+

HDR-CX300

HDR-CX350

HDR-CX500

HDR-CX550

High Definition on disc (AVCHD)

HDR-UX5

HDR-UX7

HDR-UX10DVD

HDR-UX20DVD

High Definition on tape (HDV)

HDR-HC3

HDR-HC5

HDR-HC7

HDR-HC9

SD Memory Card Camera

DCR-SX44

DCR-SX45

DCR-SX65

DCR-SX85

Hard Disk Drive

DCR-SR42A

DCR-SR45

DCR-SR62

DCR-SR65

DCR-SR68

DCR-SR82

DCR-SR82C

DCR-SR85

DCR-SR100

DCR-SR200

DCR-SR220

DCR-SR220D

DCR-SR300

DCR-SR300C

DVD

DCR-DVD105

DCR-DVD108

DCR-DVD205

DCR-DVD305

DCR-DVD308

DCR-DVD403

DCR-DVD405

DCR-DVD408
DCR-DVD505
DCR-DVD508
DCR-DVD610
DCR-DVD710
DCR-DVD810
DCR-DVD910

MiniDV

DCR-PC1000
DCR-HC26
DCR-HC28
DCR-HC36
DCR-HC38
DCR-HC46
DCR-HC48
DCR-HC52
DCR-HC62
DCR-HC90
DCR-HC96

International

High Definition on Hard Disk Drive (AVCHD)

HDR-SR10E
HDR-SR11E
HDR-SR12E
HDR-SR5E
HDR-SR7E
HDR-SR8E

High Definition on Memory Stick (AVCHD)

HDR-CX6EK
HDR-CX11
HDR-CX105 HYPEYE D MINI not recommended+
HDR-CX115 HYPEYE D MINI not recommended+
HDR-CX155 HYPEYE D MINI not recommended+
HDR-CX550
HDR-CX520
HDR-TG3
HDR-TG7

High Definition on disc (AVCHD)

HDR-UX19E

HDR-UX3E

HDR-UX7E

High Definition on tape (HDV)

HDR-HC3E

HDR-HC5E

HDR-HC7E

HDR-HC9E

Hard Disk Drive

DCR-SR32E

DCR-SR35E

DCR-SR55E

DCR-SR52E

DCR-SR72E

DCR-SR75E

DCR-SR210E

DCR-SR32E

DCR-SR52E

DCR-SR72E

DCR-SR90E

DCR-SR190E

DCR-SR290E

DVD

DCR-DVD92E

DCR-DVD110E

DCR-DVD310E

DCR-DVD410E

DCR-DVD105E

DCR-DVD106E

DCR-DVD109E

DCR-DVD202E

DCR-DVD203E

DCR-DVD205E

DCR-DVD306E

DCR-DVD403E

DCR-DVD404E

DCR-DVD405E

DCR-DVD406E

DCR-DVD505E

DCR-DVD506E

MiniDV

DCR-PC1000E

DCR-HC24E

DCR-HC27E

DCR-HC35E

DCR-HC37E

DCR-HC44E

DCR-HC45E

DCR-HC46E

DCR-HC47E

DCR-HC51E

DCR-HC62E

DCR-HC94E

DCR-HC96E

* Not all features such as switching modes and zoom control work with this model

+ Since the power button is on the inside of the LCD using a HYPEYE MINI does not help out the customer